
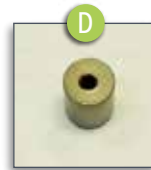
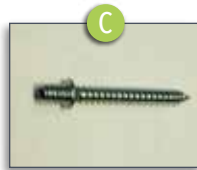


# PIR

## display mounting

# INSTRUCTIONS

### STAND-OFF SYSTEM TO WALL

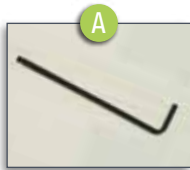

**1** Hold glass or acrylic at desired location and mark the hole locations. Predrill with a small bit first. If you do not hit a stud proceed with step 2. If you do hit a stud predrill into the stud and proceed to step 3.



**2** Screw the wall anchors (B) into the wall.



**3** Using the larger allen wrench (A) screw the threaded stud (C) into the anchor.



**4** Thread barrel (D) onto the stud.



**5** Place glass or acrylic over the barrels (D) and insert caps onto barrels (E).



**6** Use the small allen wrench to snug down the caps.



PIR  
PARTNERS IN RECOGNITION, INC.

405 S. Main St., Fort Loramie, OH 45845 | 937.420.2150 | gopir.com