




display mounting

INSTRUCTIONS

CLEAR CHANGE PANEL

1

When replacing acetate, remove the top two caps and insert one stud in each hole.

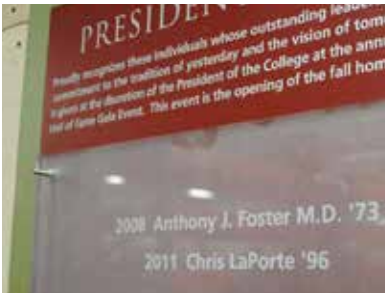


2

Remove the bottom two caps while holding the acrylic and acetate to the wall with one hand.



3

After removing the final two caps, you can remove the acrylic and acetate from the display.

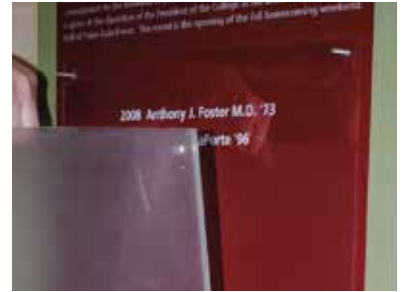

4

Place new acetate over the two studs sticking in the top two holes.



5

Place the acrylic over the acetate.



6

Replace the caps in the bottom two holes.



7

Remove the two studs at the top and replace with the caps.



PARTNERS IN RECOGNITION, INC.

405 S. Main St., Fort Loramie, OH 45845 | 937.420.2150 | gopir.com