


PIR

mounting


INSTRUCTIONS




FREESTANDING LETTERS OR ACCENTS

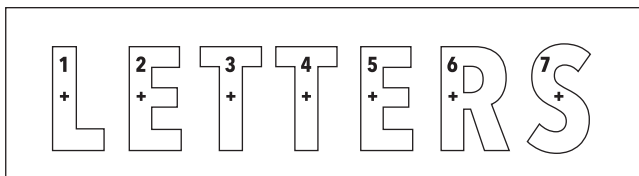


Cardboard Template

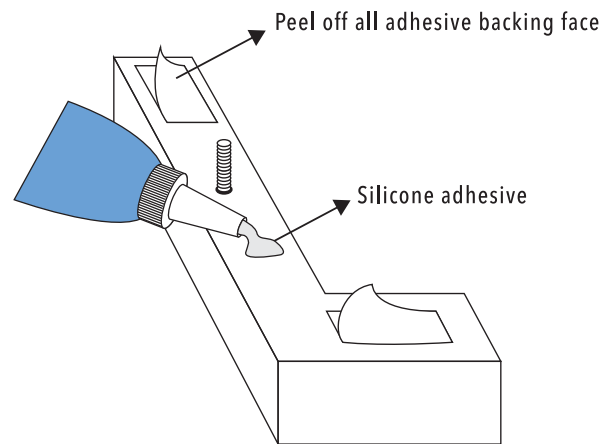

Applying Adhesive



-  1 Place the template in the correct location. Secure the template using a light tack painters tape. Double check that the template is level.
-  2 Using a 3/16" drill bit, drill through the small open hole in the template, into the mounting wall. This is for placement of the stud on the back of the letter, that will help secure it to the wall.
-  3 Leaving the template in place, gently remove the letter cutouts from the template.

-  4 On the backside of the letters to be mounted, remove the face of the adhesive strip. Using the supplied silicon, place a small amount on the backside in the open areas. (NOTE: Use only a small amount. Too much may seep out on the sides of the letter when securing it to wall. If silicon does seep out, gently wipe away before it dries.) See diagram above.
-  5 Place letters into the corresponding openings of the template, pushing firmly into drilled mounting holes.
-  6 Once all letters are set in place and level, gently remove the template. Check for level once more.

PIR
PARTNERS IN RECOGNITION, INC.