
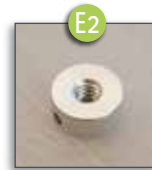
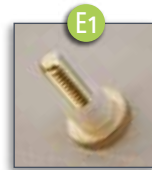


PIR

display mounting

INSTRUCTIONS

STAND-OFF SYSTEM TO WALL

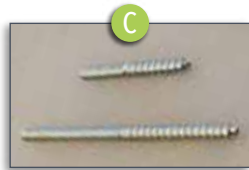

1 Hold glass, acrylic, or template at desired location and mark the hole locations. Predrill with a small bit first. If you do not hit a stud, proceed with step 2. If you do hit a stud, predrill into the stud and proceed to step 3.



2 Drill larger hole into the wall; insert anchor (B) into the drill hole.



3 Using the Fabricated Lag screw driver tool (A) screw the threaded stud (C) into the wall/anchor.



4 Thread barrel (D) onto the stud. (This step is optional; if there are no barrels included proceed to step 5)



5 Place glass or acrylic over the barrels (D) and insert caps (E1) into barrels. If there are no barrels, place glass or acrylic directly to wall and place caps (E2) over threaded stud.



6 Use the small allen wrench (F) to snug down the caps.



**Colors of parts may vary

PIR
PARTNERS IN RECOGNITION, INC.

405 S. Main St., Fort Loramie, OH 45845 | 937.420.2150 | gopir.com